

Assemble

Instruction Manual Pop-Up Fabric



1. Open the bag / trolley case and take out the Pop-Up frame



2. Place the frame in front of you with the label 'Frontside Top' facing away from you




3. Open the frame slightly by pulling the hinges outwards

Disassemble

Instruction Manual Pop-Up Fabric




1. Gently detach the fabric from the frame

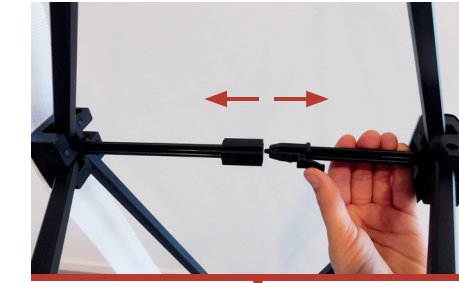

2. Open the clips by pushing the sides, a red safety mark will appear



3. Make sure all 16 clips are unlocked by checking the safety marks (they should be fully visible)

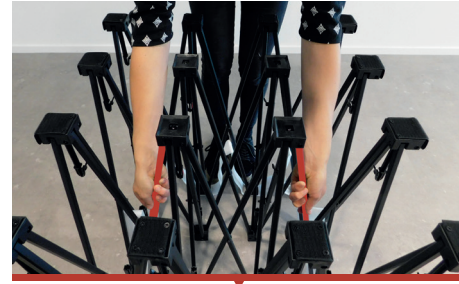


4. Place your hands on the bars as marked in the picture



5. Gently lift up the the frame, while flipping it over



6. The pop-up frame unfolds as you lift it up further

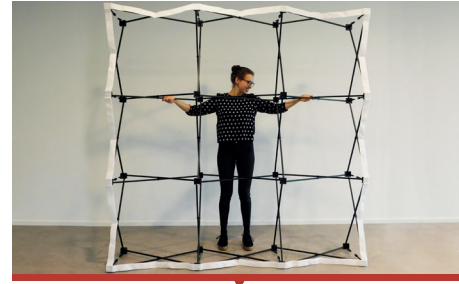


7. Push the frame outwards to completely open the frame




4. Place your hands on the bars as marked in the picture




5. Make sure you place your hands on the flat side of the hinges to prevent your fingers from getting stuck

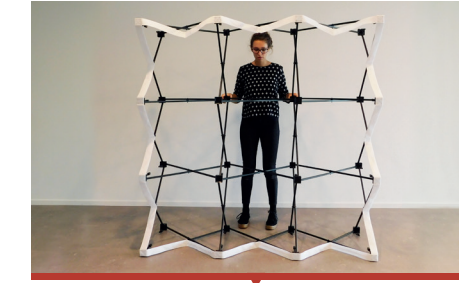


6. Slowly move your hands downwards

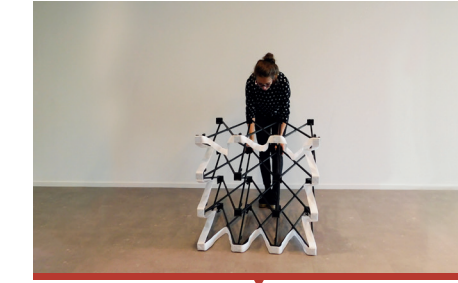


7. The frame will fold itself

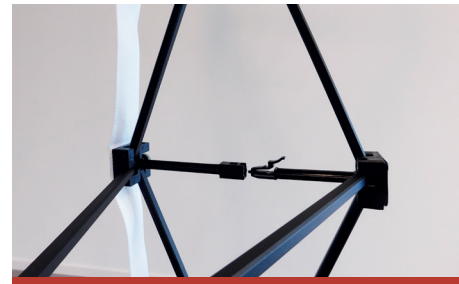

8. Check if all the clips are facing the opposite parts

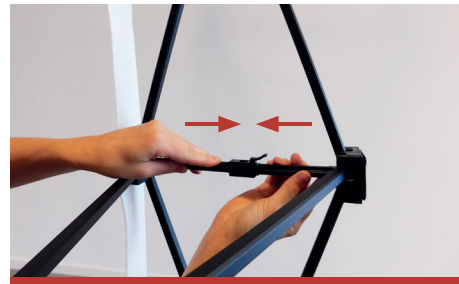

9. Close all 16 clips to lock the frame

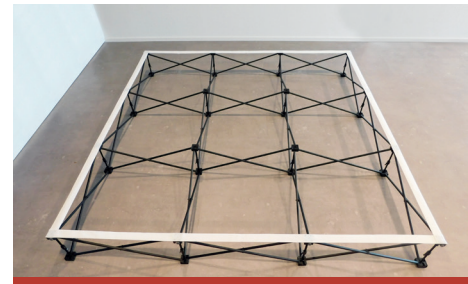


10. Place the frame on the ground with the white velcro up, for easy attachment of the print



11. The adjustable feet mark the bottom of the frame



8. Close the frame as far as it goes, without having to push it

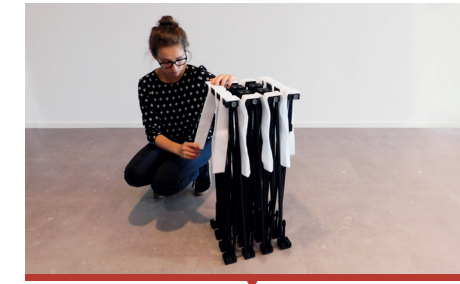

9. Pull out the white Velcro loops until they're all hanging out



10. Now you can close the frame completely without damaging it



11. Place the Pop-Up frame back in the bag / trolley case for preservation



12. Attach one corner of the fabric to the side of the frame (don't use Velcro on backside)



13. Stretch the fabric tight and go to the next corner



14. Work your way around the frame until all Velcro straps are attached



15. Lift the frame up again, the Pop Up Display Fabric is now ready to use